



(See lights schematic)

(See lights schematic for light connections.)

Important!!!
Cut red wire in this servo cord!

(Axles 5 & 6 not steered)

Everything connected through the model selector, only works when the model selector is activated, eg. "Carrier on." The selector in the crane is "model selector 2"

Vcc = Battery, 11.1 V

Local BEC prevents heavy steering from overloading receiver, and give the steering servos more power when needed.

LTM 1500-8.1 - RHH 0912		
RC configuration, carrier		
Robert Holsting	Rev 1.1	Page 1 / 1
	06-09-2014	