



"E" : External power available.  
 "S" : System is powered!

The battery is disconnected from crane when power source selector is in the "Ext / Charge" position. This position can therefore also be used as "off" if no external power source is connected.

<b>LTM 1500-8.1</b>		
<b>Main power control board</b>		
Robert Holsting	Rev 1.5	Page 1 of 1
	24-01-2013	